

**value of a division (of a precision balance scale)**

The reciprocal of the *sensitivity*; like the latter, it usually varies with load. It is determined by empirical calibration.

O.B. 35